



# GRAFFITI SHIELD<sup>INC.</sup>

HOLISTIC APPROACH TO GRAFFITI CONTROL

**Mirror Shield Installation Procedure**



## Mirror Shield Installation:

### Minimum Tools Needed:

Spray Bottle GST-0022

Film On Slip Solution GST-0019 or GST-0021 or Baby Shampoo

Paper Towels (Lint Free)

6" Triumph Scraper GST-0010 (for best results) or Scrub Pad GST-0016


Pro Handle Unger with 12" Black Squeegee GST-0004-CMP

Pro Handle Unger with 6" Blue Squeegee GST-0003CMP

Gold Hard Card GST-0015-G

Micro Fiber Towel

Ask about our Mirror Shield Kit (Basic). It has the above items in a bundle.

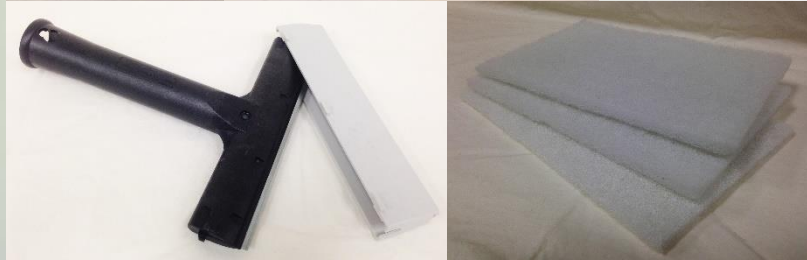



## Mirror Shield Installation:

Installation of Mirror Shield is quick and efficient, but it does have some steps we recommend for a flawless installation.

- Fill a standard spray bottle with clean filtered water. Or use a 5 gallon sprayer filled with 4 gallons of clean filtered water.
- Add Baby Shampoo, 2 capfuls for standard spray bottle or 4 oz. per 4 gallons, and shake well.
- Spray the surface with soap and water and scrub the surface with a white scrubby. Then use a 6" Triumph Scraper with SS blades and scrape the mirror clean of all debris if mirror is still dirty or has anything adhered to it.
- Wipe the surface by using micro fiber cloth or paper towel. Make sure to wipe the top and sides.
- If existing etching is fragmented, then refer to "Mirror Shield Tag Filler Directions" before proceeding.




## Mirror Shield Installation:

- Now spray the mirror again completely and use your Pro Handle Unger with 12" Black Squeegee to remove the solution from side to side, and from top to bottom.
- Spray the panel again and leave it wet.
- Next, take your Mirror Shield and remove the release liner. Do this by separating the Mirror Shield from the liner by using your fingernail or 2 pieces of tape. If ordered with a release liner tab, then simply pull the liner off with the tab.
- Spray the adhesive with the soap and water solution. Make sure to spray all areas to ensure that all adhesive is wet.
- Be careful to not crease or fold the film to itself.

## Mirror Shield Installation:

- Carefully place the Mirror Shield on the panel. Move accordingly into place as needed. If a large piece, then 2 people are recommended.
- Spray the panel with the soap and water solution.
- Squeegee Mirror Shield from center out per the arrowed diagram using Pro Handle Unger with 6" Blue Squeegee.
- Squeegee the film with slow overlapping angled passes.
- Repeat process two times to ensure water was removed.
- Dry the edges with gold card wrapped in paper towel.
- Then wipe entire panel with micro fiber towel.

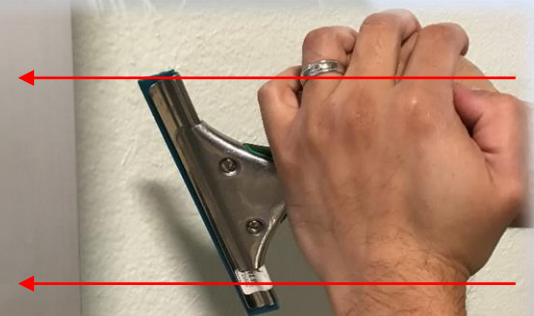

Squeegee At An Angle But Straight As  
The Red Arrow Shows